


PHYSICS OF FOIL

HEAT GAIN/LOSS IN BUILDINGS

There are three modes of heat transfer: CONDUCTION, CONVECTION, and RADIATION (INFRA-RED). Of the three, radiation is the primary mode; conduction and convection are secondary and come into play only as matter interrupts or interferes with radiant heat transfer. As the matter absorbs radiant energy, it is heated, develops a difference in temperature, and results in molecular motion (conduction in solids) or mass motion (convection in liquids and gas).

All substances, including air spaces, building materials, such as wood, glass and plaster, and insulation, obey the same laws of nature, and TRANSFER heat. Solid materials differ only in the rate of heat transfer which is mainly affected by differences in: density, weight, shape, permeability and molecular structure, Materials which transfer heat slowly can be said to RESIST heat flow.

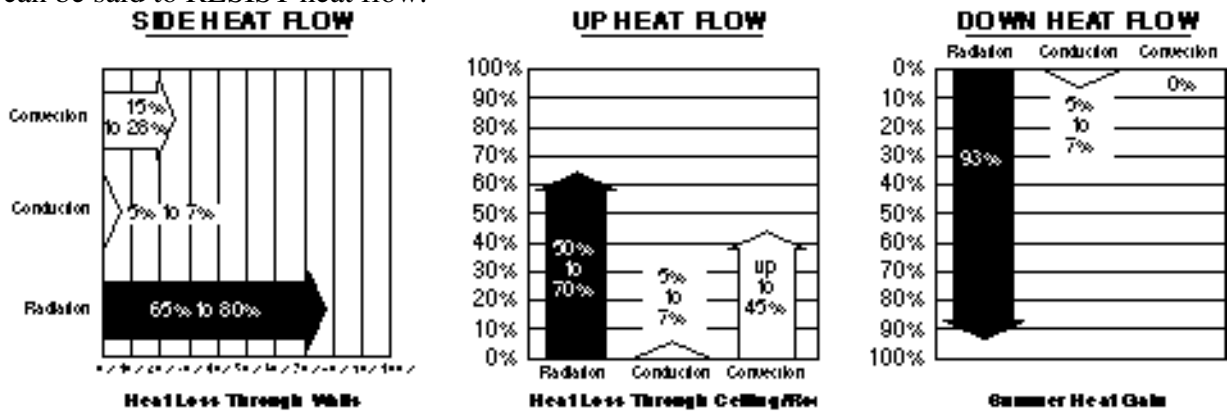

CONDUCTION is direct heat flow through matter (molecular motion). It results from actual PHYSICAL CONTACT of one part of the same body with another part, or of one body with another. For instance, if one end of an iron rod is heated, the heat travels by conduction through the metal to the other end; it also travels to the surface and is conducted to the surrounding air which is another, but less dense, body. An example of conduction through contact between two solids is a cooking pot on the solid surface of a hot stove. The greatest flow of heat possible between materials is where there is direct conduction between solids. Heat is always conducted from warm to cold; never from cold to warm, and always moves via the shortest and easiest route. In general, the denser a substance, the better conductor it is. Solid rock, glass, and aluminum, being very dense are good conductors of heat. Reduce their density by mixing air into the mass, and their conductivity is reduced. Because air has low density, the percentage of heat transferred by conduction through air is comparatively small. Two thin sheets of aluminum foil with about one inch of air space in between weigh less than one ounce per square foot.

The ratio is approximately 1 of mass to 100 of air, most important in reducing heat flow by conduction. The less dense the mass, the less will be the flow of heat by conduction.

CONVECTION is the transport of heat within a gas or liquid, caused by the actual flow of material itself (mass motion). In building spaces, natural convection heat flow is largely upward, somewhat sideways, not downwards. This is called "free convection". For instance, a warm stove, person, floor, wall, etc., loses heat by conduction to the cooler air in contact with it. This added heat activated (warms) the molecules of the air, which expand, becoming less dense, and rise. Cooler, heavier air rushes in from the side and below to replace it. The popular expression "hot air rises" is exemplified by smoke rising from a chimney or cigarette. The motion is turbulently upward, with a component of sideways motion.

Convection may also be mechanically induced as by a fan. This is called "forced convection".

RADIATION is the transmission of electromagnetic rays through space. Radiation, like radio waves, is invisible. Infrared rays occur between light and radar waves, (between 3 to 15 micron portion of the spectrum). Henceforth, when we speak of radiation, we refer only to infrared rays. Each material whose temperature is above absolute zero (273.15 K or 32 F.) emits infrared radiation, including: the sun, icebergs, stoves or radiators, humans, animals, furniture, ceilings, walls, floors, etc.

All objects radiate infrared rays from their surfaces in all directions, in a straight line, until they are reflected or absorbed by another object. Traveling at the speed of light, these rays are invisible, and they have NO TEMPERATURE, only energy. Heating an object excites the surface molecules, causing them to give off infrared radiation. When these infrared rays strike the surface of another object, the rays are absorbed, and only then is heat produced in the object. This heat spreads throughout the mass by conduction. The heated object then transmits infrared rays from exposed surfaces by radiation, if these surfaces are exposed directly to an air space.

The amount of radiation emitted is a function of the EMISSIVITY factor of the source's surface. EMISSIVITY is the rate at which radiation (EMISSION) is given off. Absorption of radiation of an object is proportional to the absorptivity factor of its surface which is reciprocal of its emissivity.

Although two objects may be identical, if the surface of one were covered with a material of 90% emissivity, and the surface of the other with a material of 5% emissivity, there would result a drastic difference in the rate of radiation flow from these two objects. This is demonstrated by comparison of four identical, equally heated iron radiators covered with different materials. Paint one with aluminum paint and another with ordinary enamel. Cover the third with asbestos and the fourth with aluminum foil. Although all have the same temperature, the one covered with aluminum foil would radiate the least [lowest (5%) emissivity]. The radiators covered with ordinary paint or asbestos would radiate most, because they have the highest emissivity, (even higher than ordinary iron).

Painting over the aluminum paint or foil with ordinary paint changes the surface to 90% emissivity.

Materials whose surfaces do not appreciably reflect infrared rays, for example, paper, asphalt, wood, glass and rock, have absorption and emissivity rates ranging from 80% to 93%. Most materials used in building construction such as brick, stone, paper, and so on regardless of their color, absorb infrared radiation at about 90%. It is interesting to note that a mirror is glass is an excellent reflector of light but a poor reflector of infrared radiation. Mirrors have about the same reflectivity for infrared as a coating of black paint. The surface of aluminum has the ability NOT TO ABSORB, but REFLECT, 95% of the infrared rays which strike it. Since aluminum has such a low mass to air ration, very little conduction can take place, particularly when only 5% of the rays are absorbed.

TRY THIS EXPERIMENT: Hold a sample of FOIL INSULATION close to your face, without torching. Soon you will feel the warmth of your infrared rays bouncing back from the SURFACE. The explanation: The emissivity of the heat radiation of your face is 99%. The absorption of the aluminum is only 5%. It sends back 95% of the rays. The absorption rate of your face is 99%. The net result is that you feel the warm of your face reflected.


REFLECTIVITY AND AIR SPACES

In order to retard heat flow by conduction, walls and roofs are built with internal air spaces. Conduction and convection through these air spaces combines represent only 20% to 35% of the heat, which pass through them.

In both winter and summer, 65% to 85% of the heat that passes from a warm wall to a colder wall and through a ventilated attic does so by radiation.

The value of air spaces as thermal insulation must include the character of the enclosing surfaces. The surfaces greatly affect the amount of energy transferred by radiation, depending on the material's absorptivity and emissivity, and are the only way of modifying the heat transferred across a given space. The importance of radiation cannot be overlooked in problems involving ordinary room temperatures.

The following test results illustrate how heat transfer across a given air space may be modified. The distance between the hot and cold walls is 1 1/2" and the temperatures of the hot and cold surfaces are 212° and 32°, respectively. In CASE 1, the enclosing walls are paper, wood, asbestos or other material. In CASE 2, the walls are lined with aluminum foil. In CASE 3, two sheets of aluminum are used to divide the enclosure into three 1/2" spaces.

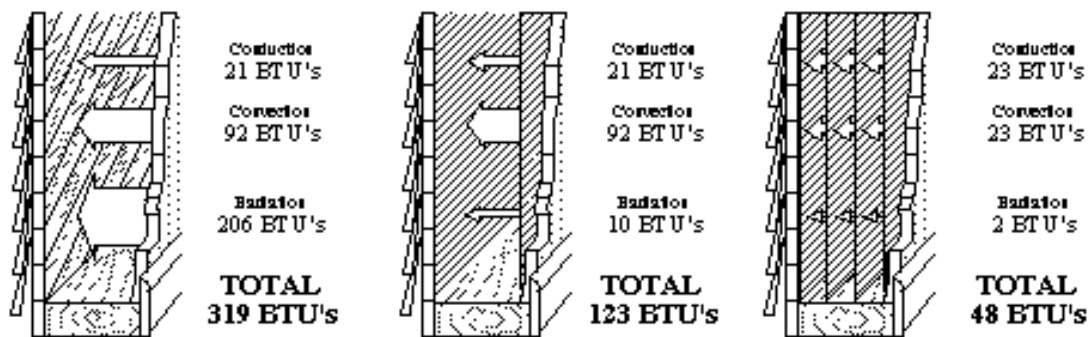

CASE 1. UNINSULATED WALL SPACE. The surface of ordinary building materials, including ordinary bulk insulation have a radiation or emissivity rate of about 90%, a heat ray absorption rate of over 90%. Air has low density, so conduction is slight (only 21 BTU's.) Convection currents transfer 92 BTU's.

CASE 2. THE SAME WALL EXCEPT that the inner surfaces were lined with sheets of aluminum foil of 5% emissivity and absorptivity.* Note the drastic drop in heat flow by radiation, from 206 BTU's to 10 BTU's. Conduction and convection are unchanged. The original total heat loss of 319 BTU's drops to 123 BTU's.

CASE 3. TWO SHEETS OF (5% EMISSIVE) ALUMINUM FOIL divide the wall space into 3 reflective compartments. Heat loss by radiation drops 94% from case 1. The 2 interior sheets retard convection so that its flow falls 75%. Conduction rises only 2 BTU's from 21 BTU's to 23 BTU's. The total heat loss drops 85% from case 1.

Note: 65% (206) BTU's of the total BTU's going through the wall space is radiation.

*Note: Aluminum has 3% to 5% emissivity and absorptivity.

Reflection and emissivity by surfaces can ONLY occur in SPACE. The ideal space is any dimension 3/4" or more. Smaller spaces are also effective, but decreasingly so. Where there is no air space, we have conduction through solids. When a reflective surface of a material is attached to a ceiling, floor, or wall, that particular surface ceases to have radiant insulation value at the points of contact. Therefore, care must be exercised, when installing FOIL INSULATION, that it be stretched sufficiently to insure that any inner air spaces are properly opened up and that metal does not touch metal. Otherwise, conduction through solids will result at the point of contact.

Heat control with aluminum foil is made possible by taking advantage of its low thermal emissivity and the low thermal conductivity of the air. It is possible with layered foil and air to practically eliminate heat transfer by radiation and convection: a fact employed regularly by the NASA space program. In the space vehicle Columbia, ceramic tiles are imbedded with aluminum bits which reflect heat before it can be absorbed. "Moon suits" are made of reflective foil surfaces surrounding trapped air for major temperature modification.

HEAT LOSS THROUGH AIR

There is no such thing as a "dead" air space as far as heat transfer is concerned, even in the case of a perfectly airtight compartment such as a thermos bottle. Convection currents are inevitable with differences in temperature between surfaces, if air or some other gas is present inside. Since air has some density, there will be some heat transfer by conduction

if any surface of a so-called "dead" air space is heated. Finally, radiation, which accounts for 50% to 80% of all heat transfer, will pass through air (or a vacuum) with ease, just as radiation travels the many million miles that separate the earth from the sun.

Aluminum Foil, with its reflective surface can block the flow of radiation. Some foils have higher absorption and emissivity qualities than others. The variations run from 2% to 72%, a differential of over 2000%. Most aluminum insulation has only a 5% absorption and emissivity ratio. It is impervious to water vapor and convection currents, and reflects 95% of all radiant energy that strikes its air bound surfaces. The performance of most aluminum insulation is unsurpassed for upward winter heat and it has an added efficiency for downward summer heat because of the absence of convection currents.**

HEAT LOSS THROUGH FLOORS

Heat is lost through floors primarily by radiation (up to 93%). When ALUMINUM insulation is installed in the ground floors and crawl spaces of cold buildings, it prevents the heat rays from penetrating downward -reflecting the heat back into the building, thereby warming the floor surfaces. Since aluminum is non-permeable, it is unaffected by ground vapors.

CONDENSATION

Water vapor is the gas phase of water. As a gas, it will expand or contract to fill any space it may be in. In a given space, with the air at a given temperature, there is a limited amount of water vapor that can be suspended; any excess will turn into water. The point just before condensation commences is called 100% saturation. The condensation point is called dew point. CONDENSATION FORMS WHENEVER AND WHEREVER VAPOR REACHED DEW POINT.

** The National Bureau of Standards, in its booklet BMS52, "Effects of Ceiling Insulation Upon Summer Comfort," lists 2 layers of aluminum foil as the most effective insulation protection against summer heat.